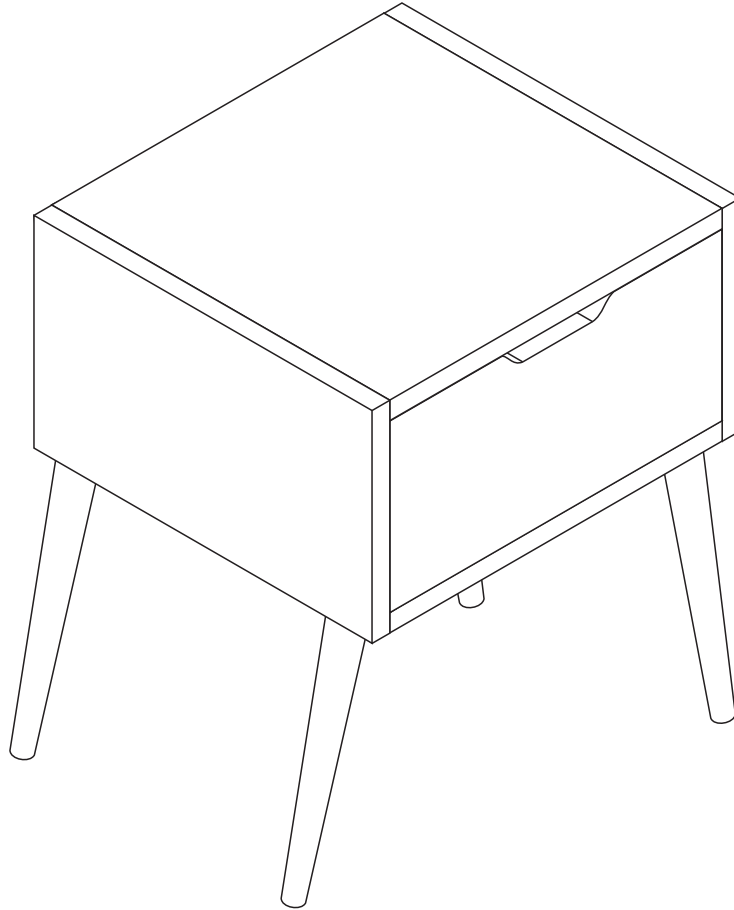


STOCKHOLM 1 DRAWER NIGHTSTAND ASSEMBLY INSTRUCTIONS

Thank you for purchasing the **STOCKHOLM 1 DRAWER NIGHTSTAND**. Please read the instructions carefully to ensure safe operation of the product.




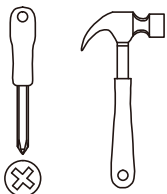
Size: W29.5 x D29.5 x H32.3cm
COLOUR: WHITE & OAK

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tools Required



30Mins
Set Up

STOCKHOLM 1 DRAWER NIGHTSTAND ASSEMBLY INSTRUCTIONS

**IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS
FOR FUTURE REFERENCE.**

INFORMATION

- This product is intended for a maximum load of 20 kg spread evenly through the storage compartments. Do not exceed this weight.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- This product should only be used on firm, level ground.
- Tools are not included.

WARNINGS

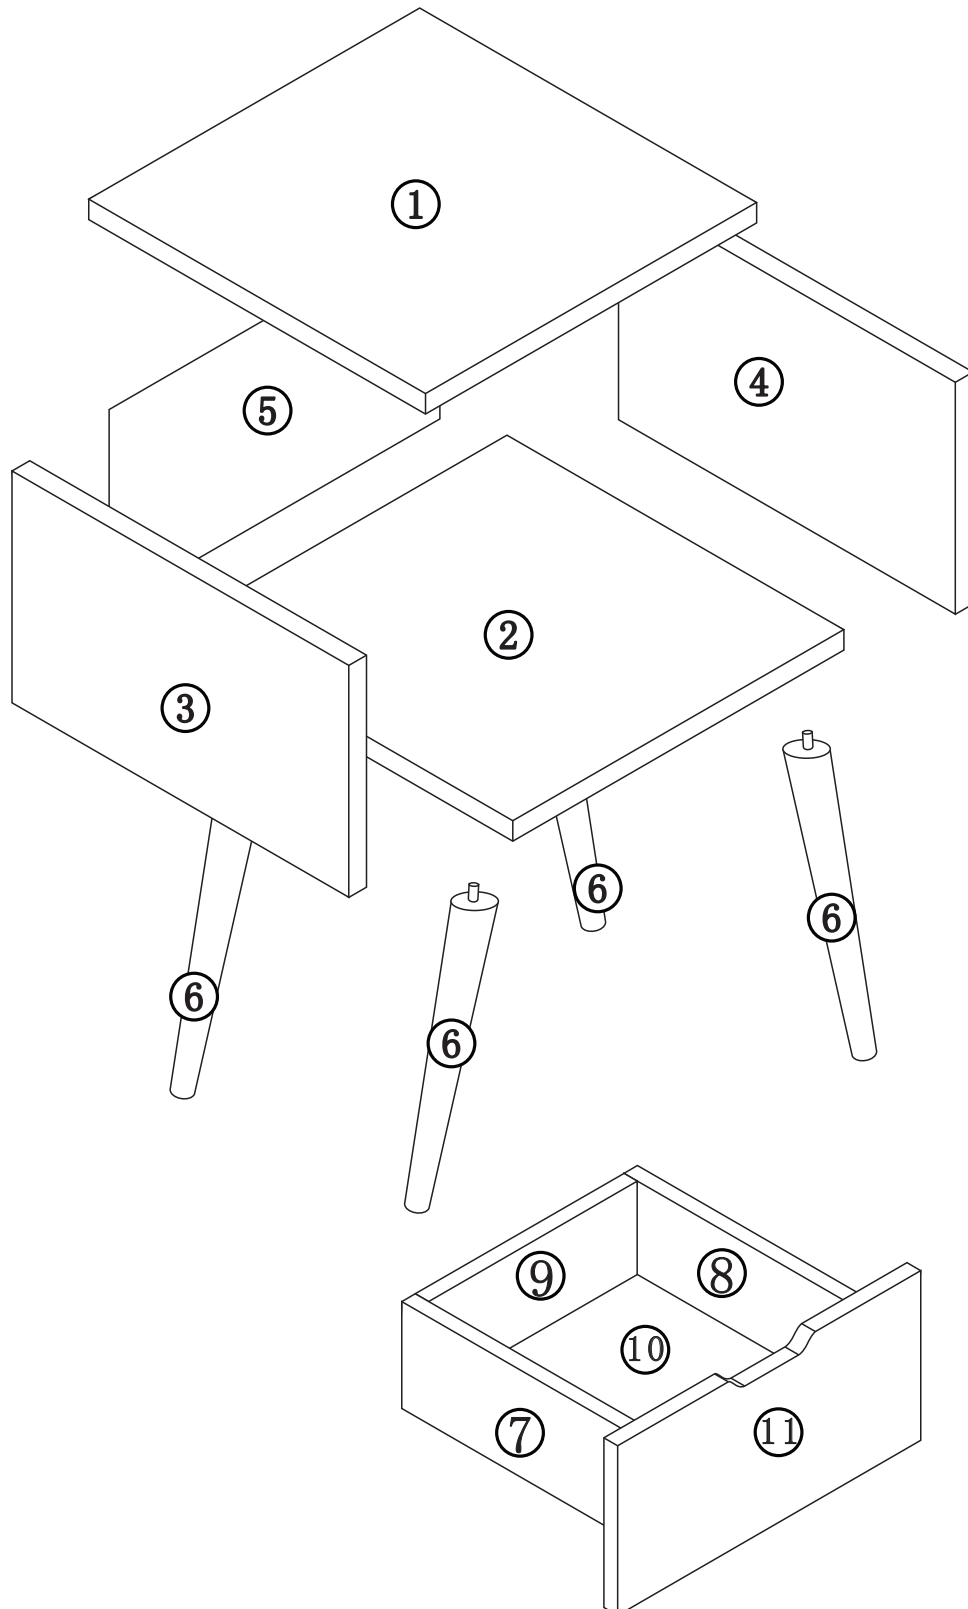
- DO make sure the legs remain in contact with the ground.
- DO keep small parts out of reach of children.
- DO NOT use power tools to construct this product.
- DO NOT tighten screws until fully assembled.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT sit or stand on the product.

CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product

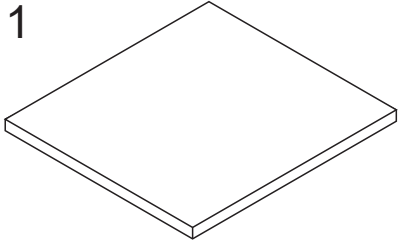
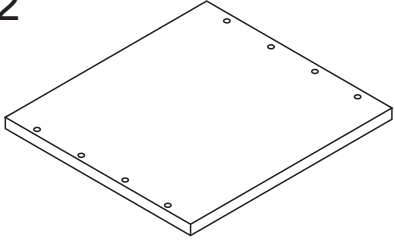
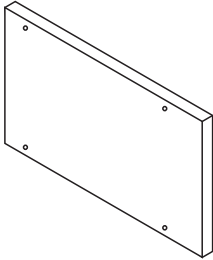
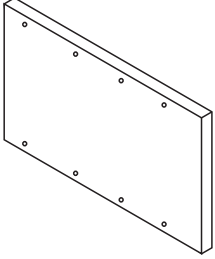
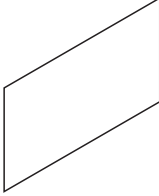
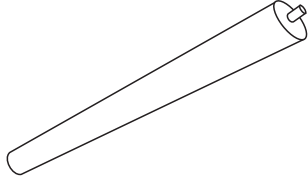
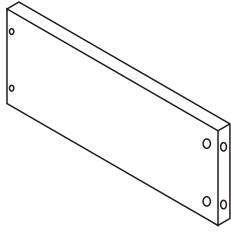
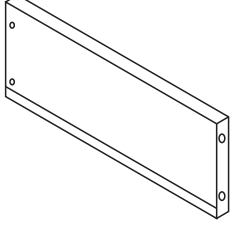
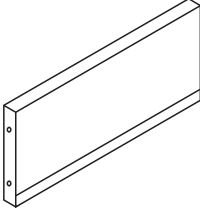
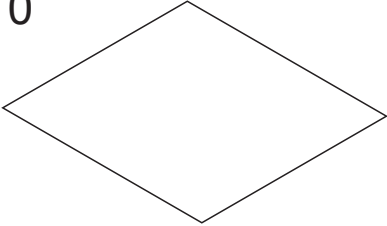
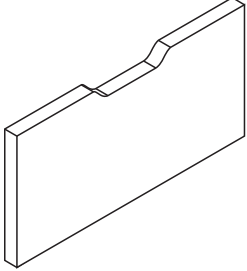
STOCKHOLM 1 DRAWER NIGHTSTAND ASSEMBLY INSTRUCTIONS

Please check the pack contents before assembling this product. If any components are missing, please contact your retailer. The fittings pack contains small items that should be kept away from small children.



STOCKHOLM 1 DRAWER NIGHTSTAND ASSEMBLY INSTRUCTIONS

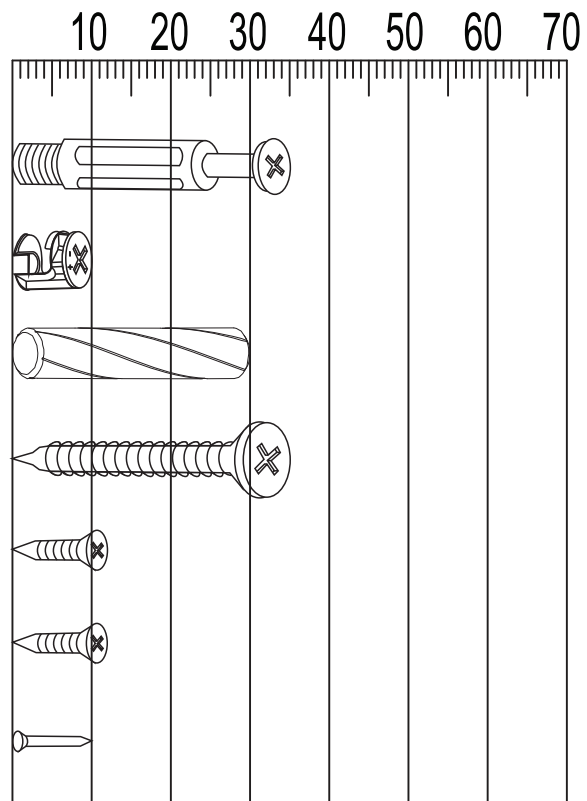
PARTS

<p>1</p> 	<p>2</p> 	<p>3</p> 
<p>DESCRIPTION:TOP PANEL QTY:1 PC DIMENSIONS:295X271X12MM</p>	<p>DESCRIPTION:BOTTOM PANEL QTY:1 PC DIMENSIONS:295X271X12MM</p>	<p>DESCRIPTION:LEFT SIDE PANEL QTY:1 PC DIMENSIONS:295X148X12MM</p>
<p>4</p> 	<p>5</p> 	<p>6</p> 
<p>DESCRIPTION:RIGHT SIDE PANEL QTY:1 PC DIMENSIONS:295X148X12MM</p>	<p>DESCRIPTION:BACK PANEL QTY:1 PC DIMENSIONS:285X142X3MM</p>	<p>DESCRIPTION:WOODEN LEG QTY:4 PCS DIMENSIONS:175X35MM</p>
<p>7</p> 	<p>8</p> 	<p>9</p> 
<p>DESCRIPTION:DRAWER LEFT SIDE PANEL QTY:1 PC DIMENSIONS:238X90X12MM</p>	<p>DESCRIPTION:DRAWER RIGHT SIDE PANEL QTY:1 PC DIMENSIONS:238X90X12MM</p>	<p>DESCRIPTION:DRAWER BACK PANEL QTY:1 PC DIMENSIONS:222X90X12MM</p>
<p>10</p> 	<p>11</p> 	
<p>DESCRIPTION:DRAWER BOTTOM PANEL QTY:1 PC DIMENSIONS:231X236X3MM</p>	<p>DESCRIPTION:DRAWER FRONT PANEL QTY:1 PC DIMENSIONS:267X120X12MM</p>	

STOCKHOLM 1 DRAWER NIGHTSTAND ASSEMBLY INSTRUCTIONS

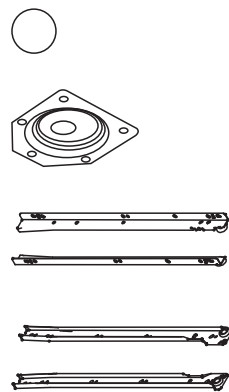
FIXINGS (TO SCALE)

Ref	Dimensions	Qty
A	CAM BOLT (6x35mm)	4
B	CAM LOCK (15x10mm)	4
C	DOWEL (6X30MM)	8
D	SCREWS (4x35mm)	12
E	SCREWS (4x12mm)	20
F	SCREWS (3.5x12mm)	8
G	NAIL (1.5x10mm)	10



NOT TO SCALE

H	STICKERS	8
I	LEG BRACKETS	4
J	DRAWER BASE RUNNERS	1
K	CABINET RUNNER	1

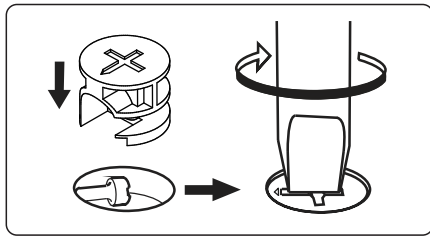


CAUTION: There are many small components used in the construction of this product. Please keep these components away from young children whilst assembling this product.

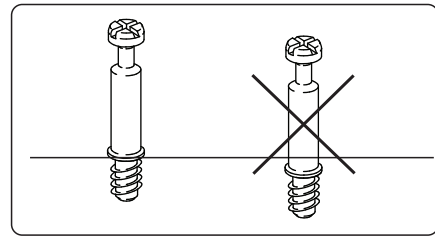
If you keep the fittings in a bowl during assembly you will be less likely to lose them!

STOCKHOLM 1 DRAWER NIGHTSTAND ASSEMBLY INSTRUCTIONS

General Hints and Tips

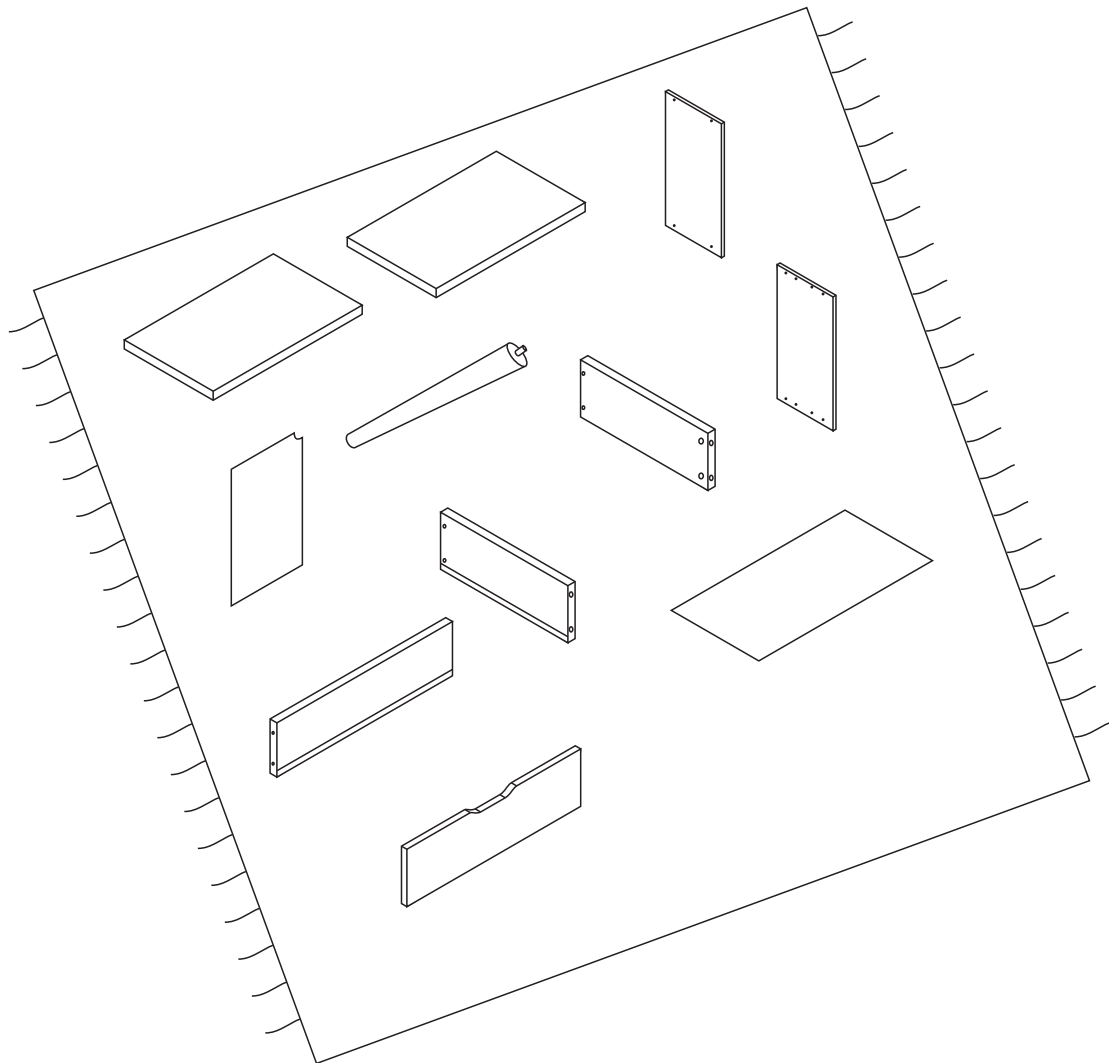


Don't screw too deep

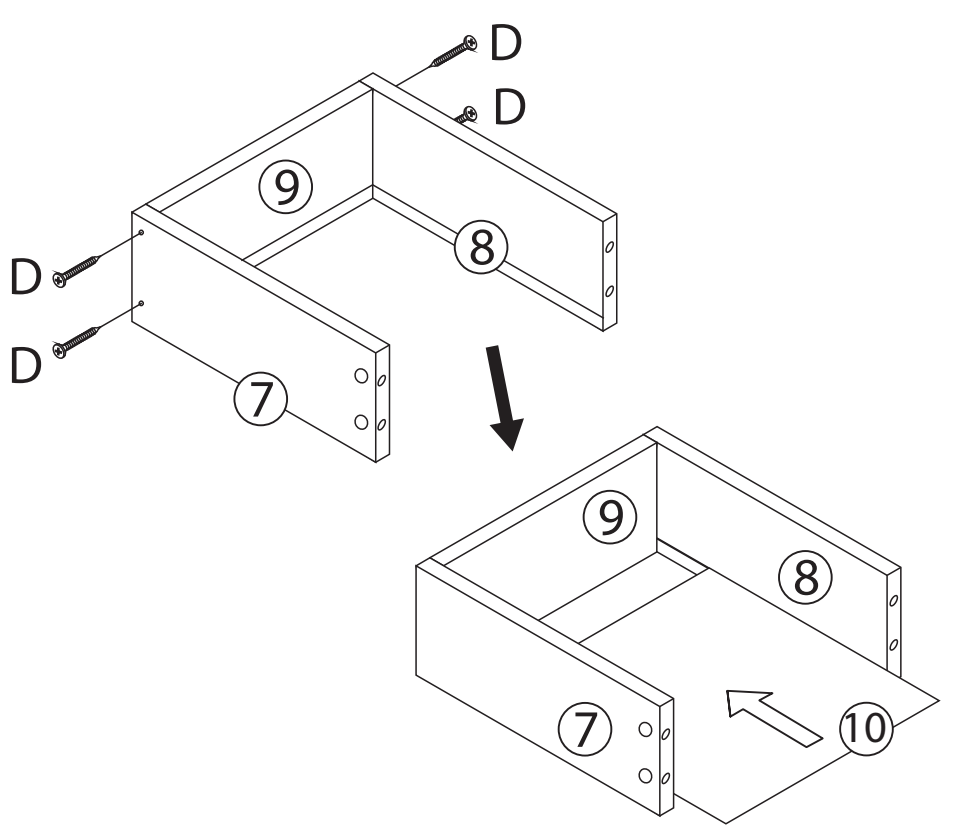


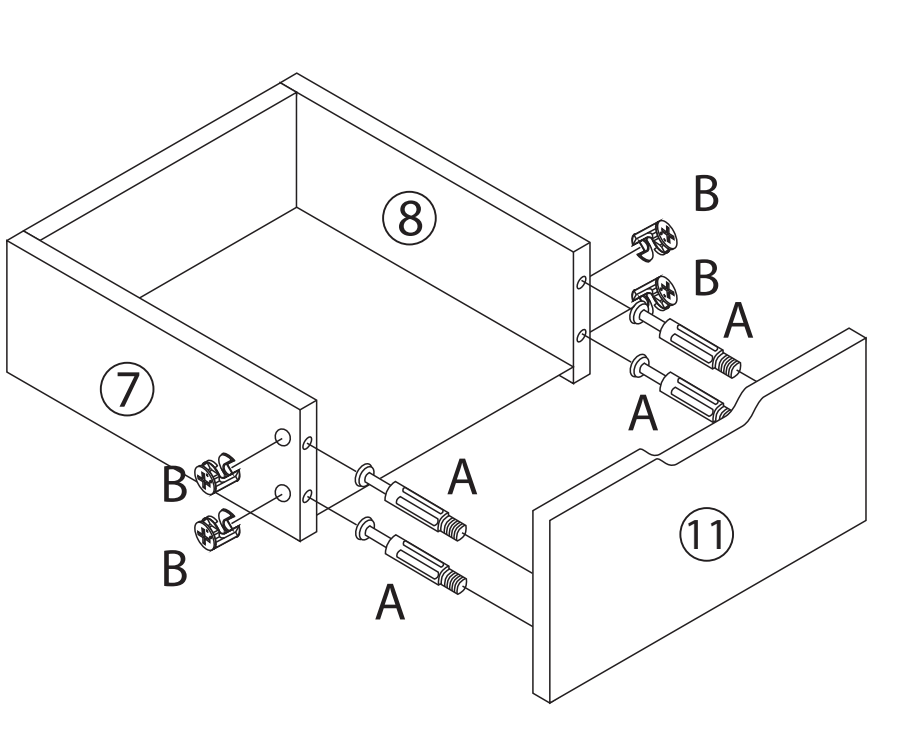
Layout Parts on Soft Surface

Layout all part on a soft surface i.e. Rug, carpet or packaging carton

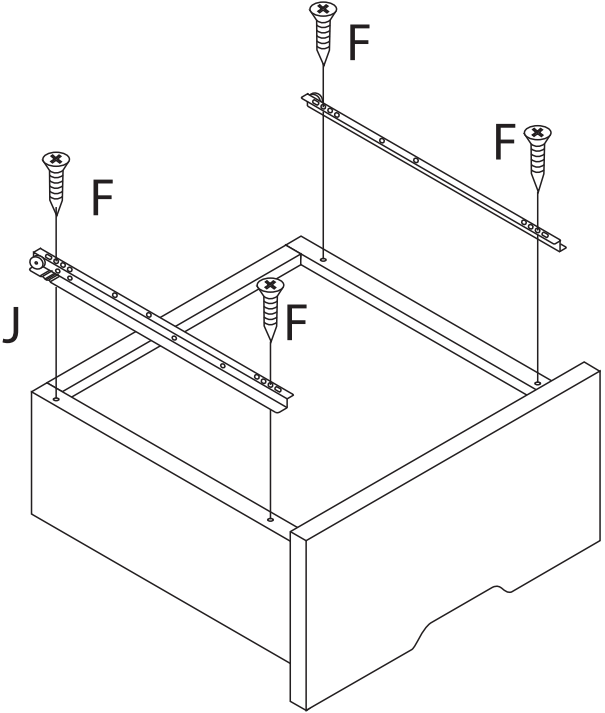


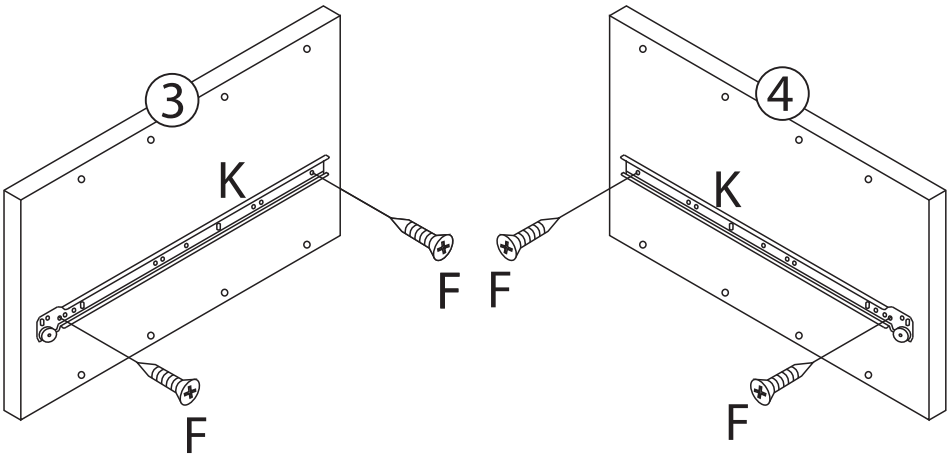
STOCKHOLM 1 DRAWER NIGHTSTAND ASSEMBLY INSTRUCTIONS

STEP 1	PARTS REQUIRED
	<p>7: DRAWER LEFT SIDE PANEL x 1 8: DRAWER RIGHT SIDE PANEL x 1 9: DRAWER BACK PANEL x 1 10: DRAWER BOTTOM BOTTOM PANEL x 1</p> <p>D: SCREWS x 4</p>

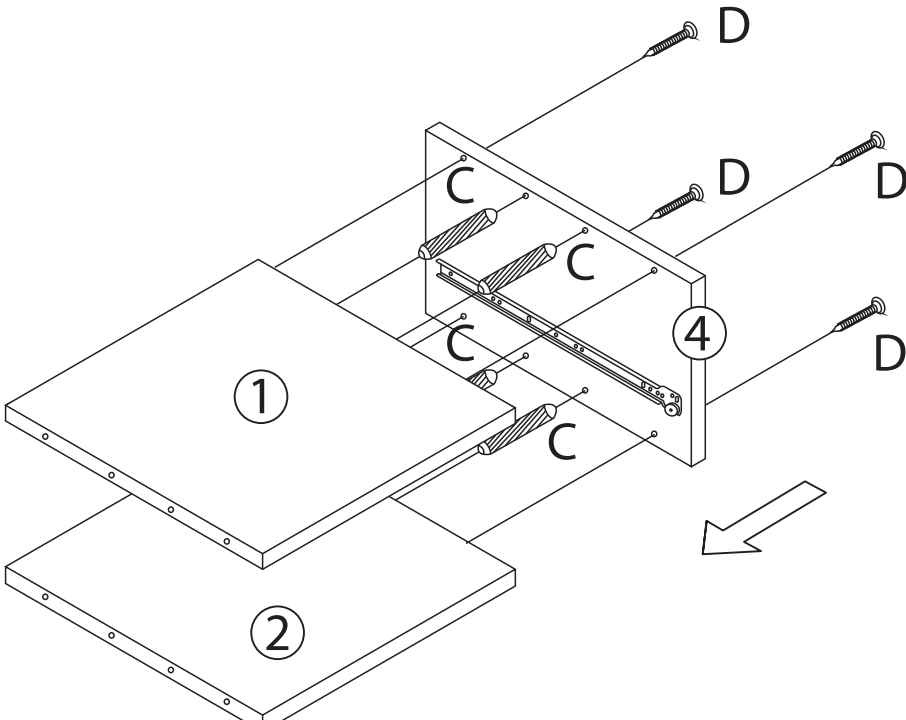
STEP 2	PARTS REQUIRED
	<p>7: DRAWER LEFT SIDE PANEL x 1 8: DRAWER RIGHT SIDE PANEL x 1 11: DRAWER FRONT BOTTOM PANEL x 1</p> <p>A: CAM BOLT x 4 B: CAM LOCK x 4</p>

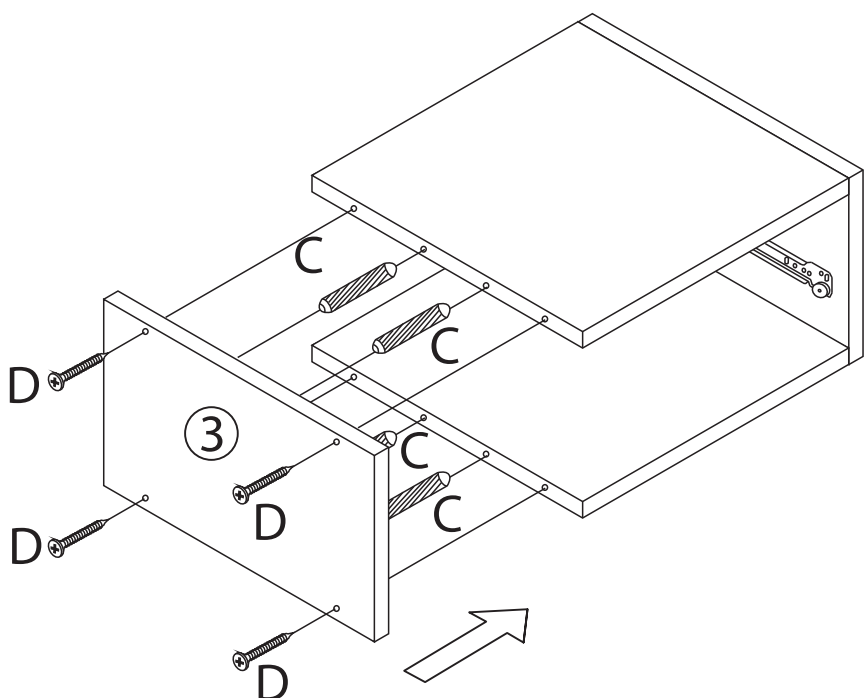
STOCKHOLM 1 DRAWER NIGHTSTAND ASSEMBLY INSTRUCTIONS

STEP 3	PARTS REQUIRED
	<p>F: SCREWS x 4 J: DRAWER BASE RUNNERS x 1</p>

STEP 4	PARTS REQUIRED
	<p>3: LEFT SIDE PANEL x 1 4: RIGHT SIDE PANEL x 1</p> <p>F: SCREWS x 4 K: CABINET RUNNER x 1</p>

STOCKHOLM 1 DRAWER NIGHTSTAND ASSEMBLY INSTRUCTIONS

STEP 5	PARTS REQUIRED
	<p>1: TOP PANEL x 1 2: BOTTOM PANEL x 1 4: RIGHT SIDE PANEL x1</p> <p>C: DOWEL x 4 D: SCREWS x 4</p>

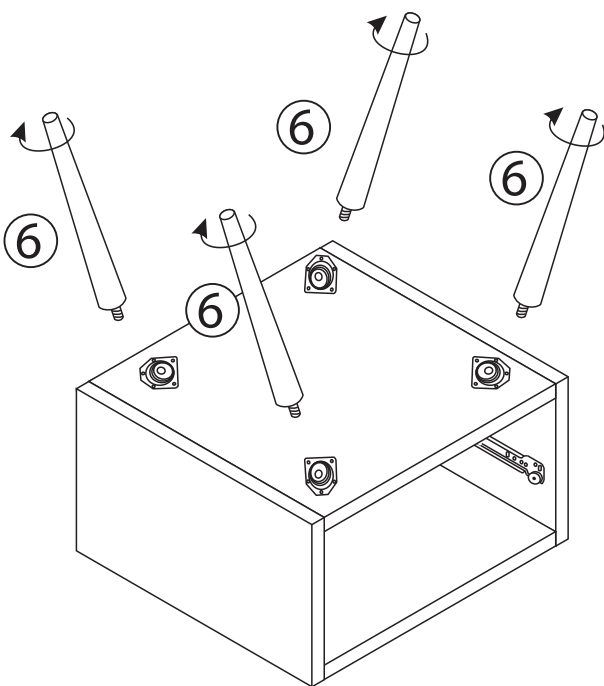
STEP 6	PARTS REQUIRED
	<p>3: LEFT SIDE PANEL x1</p> <p>C: DOWEL x 4 D: SCREWS x 4</p>

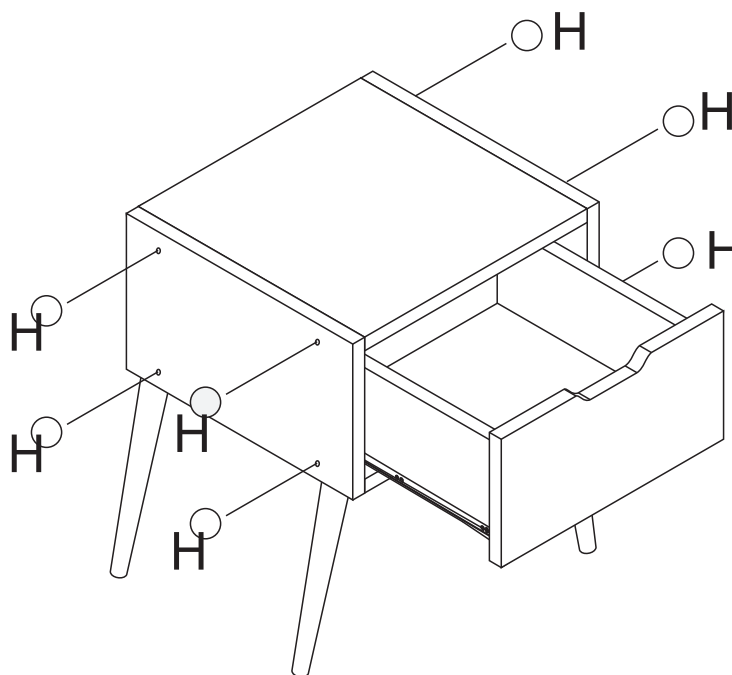
STOCKHOLM 1 DRAWER NIGHTSTAND ASSEMBLY INSTRUCTIONS

STEP 7	PARTS REQUIRED
<p>The diagram shows a 3D perspective of the nightstand's main frame. Ten nails, labeled 'G', are being driven into the top surface of the back panel, which is labeled with a circled '5'. The nails are positioned along the perimeter of the back panel to secure it to the frame.</p>	<p>5: BACK PANEL x1</p> <p>G: NAIL x 10</p>

STEP 8	PARTS REQUIRED
<p>The diagram illustrates the installation of four leg brackets, labeled 'I', onto the bottom corners of the nightstand frame. Each bracket is secured with two screws, labeled 'E'. An inset box on the left provides a detailed view of a single leg bracket being attached to a corner of the frame, showing the screws being driven through the bracket into the frame. The quantity 'x4' is indicated below the inset. Arrows point to the four corners where the brackets are being installed.</p>	<p>E: SCREWS x 20</p> <p>I: LEG BRACKETS x 4</p>

STOCKHOLM 1 DRAWER NIGHTSTAND ASSEMBLY INSTRUCTIONS

STEP 9	PARTS REQUIRED
	6: WOODEN LEG x 4

STEP 10	PARTS REQUIRED
	H: STICKERS x 8

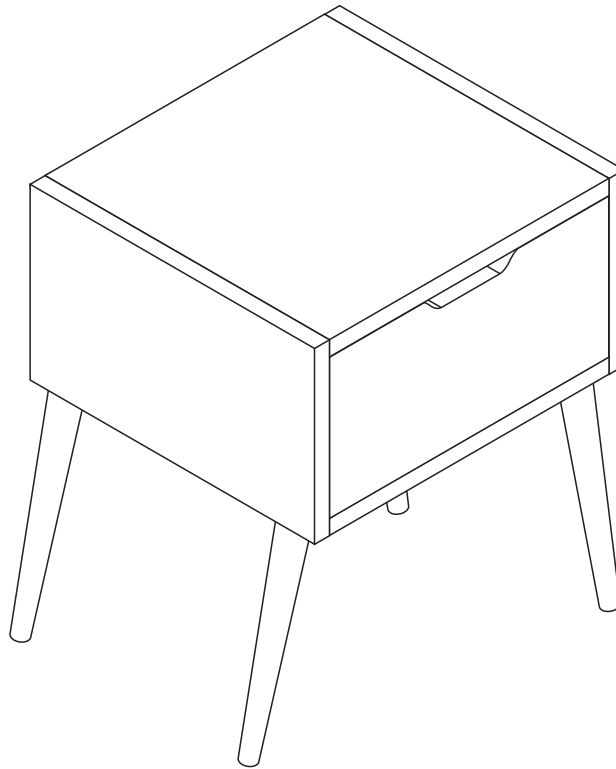
STOCKHOLM 1 DRAWER NIGHTSTAND ASSEMBLY INSTRUCTIONS

Complete Assembly

Your **STOCKHOLM 1 DRAWER NIGHTSTAND** is now completely assembled.

Periodically check to ensure that the components are in their proper position, free from damage.

Also, make sure the connectors are tight and secure.



Retain these instructions for future reference.

