


# BED ASSEMBLY INSTRUCTION

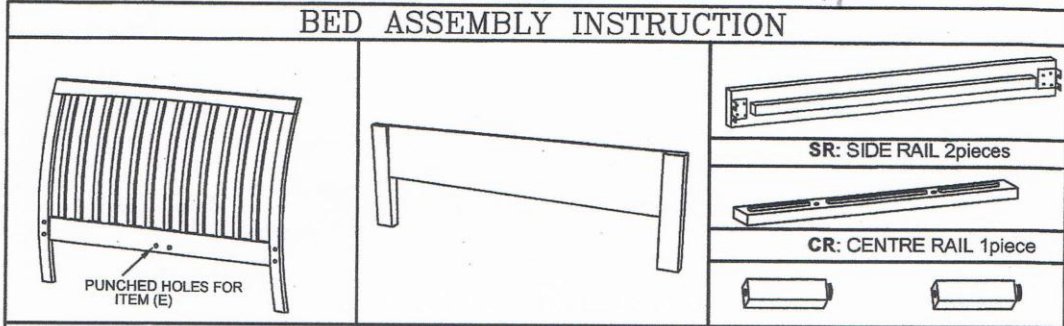

ITEM	QTY.	DESCRIPTION	
A	8	JCBB SCREW M8 X 25mm	
B	1	ALLEN KEY M5	
C	4	RATTAN SCREW #8 X 1-1/4"	
D	48	RATTAN SCREW #8 X 1"	
E	2	U- WOODEN BRACKET	
F	2	JCBB SCREW M6 X 40mm	
G	1	ALLEN KEY M4	

## 7 EASY STEPS

**STEP 1:-**  
SCREW IN ITEM (CRS) INTO (CR) WITH ITEM (F) USING ITEM (G)

**STEP 2:-**  
FIX ITEM (A) INTO ALL THE (HB)&(FB) HOLES (DO NOT TIGHTEN IT) USING ITEM (B)

**STEP 3:-**  
SLOT IN (SR) ONTO THE ITEM (A)

**STEP 4:-**  
TIGHTEN ITEM (A) USING ITEM (B)

**STEP 5:-**  
FIX THE ITEM (E) ONTO THE (HB)&(FB) SCREW HOLES WITH ITEM (C)

**STEP 6:-**  
SLOT IN (CR) ONTO THE ITEM (E)

**STEP 7:-**  
SCREW ITEM (ST) ONTO BOTH (SR) (AT SCREW HOLES) WITH ITEM (D).

**COMPLETE BED**