



# ASSEMBLY

## STEP 1

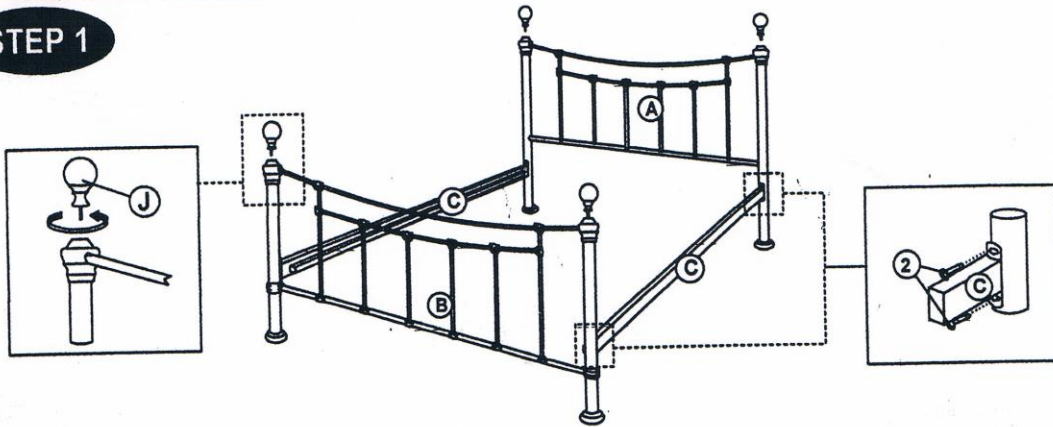


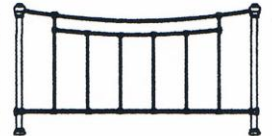

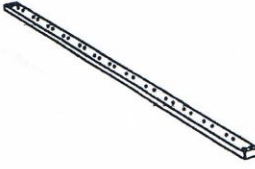


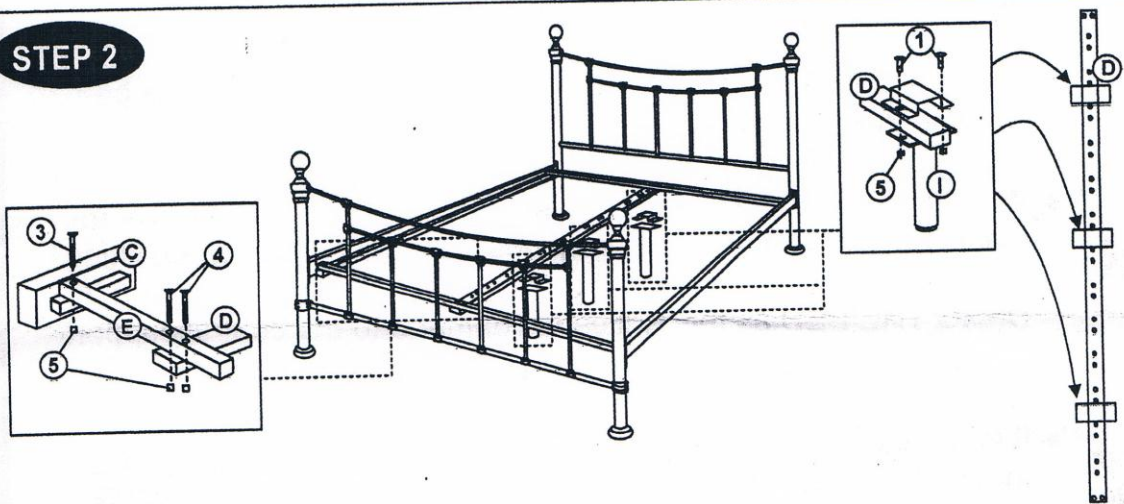






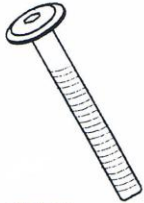


## STEP 2




## STEP 3



# Component parts and fittings contained in the box

|  |  |  |  |
|--|--|--|--|
| <p><b>A</b></p>  <p>1 PC</p>                | <p><b>B</b></p>  <p>1 PC</p>                | <p><b>C</b></p>  <p>2 PCS</p>                  | <p><b>D</b></p>  <p>1 PC</p>                    |
| <p><b>E</b></p>  <p>2 PCS</p>               | <p><b>F</b></p>  <p>26 PCS</p>              | <p><b>G</b></p>  <p>13 PCS</p>                  | <p><b>H</b></p>  <p>26 PCS</p>                  |
| <p><b>I</b></p>  <p>3 PCS</p>              | <p><b>J</b></p>  <p>4 PCS</p>              | <p><b>1</b></p>  <p>M6x15mm<br/>6 PCS</p>     | <p><b>2</b></p>  <p>M6x20mm<br/>8 PCS</p>      |
| <p><b>3</b></p>  <p>M6x50mm<br/>4 PCS</p> | <p><b>4</b></p>  <p>M6x60mm<br/>4 PCS</p> | <p><b>5</b></p>  <p>M6 Hex Nut<br/>14 PCS</p> | <p><b>6</b></p>  <p>M4 Allen Key<br/>1 PC</p> |

**TWO PEOPLE NEEDED TO ASSEMBLE THIS BED**

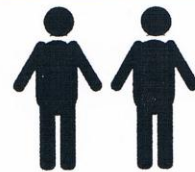

5' METIS