

Model: OSLO THREE SLEEPER BED

Assembly steps 1 to 5

ATTENTION:

Do not tighten any bolts before all the parts have been assembled loosely. Product and/or fittings might be damaged by not tighten any bolts before all the parts have been assembled loosely. Product and/or fittings might be damaged by over tightening screws or bolts. Beware of cross-threading the screws or nuts during assembly.


Wipe clean using soft damp cloth followed by a dry cloth.

Do not use abrasives or cleaning products which may contain ammonia or solvents.

Take care when handling or moving the furniture. Careless handling can damage the flooring. try to lift rather than drag.




Step 2




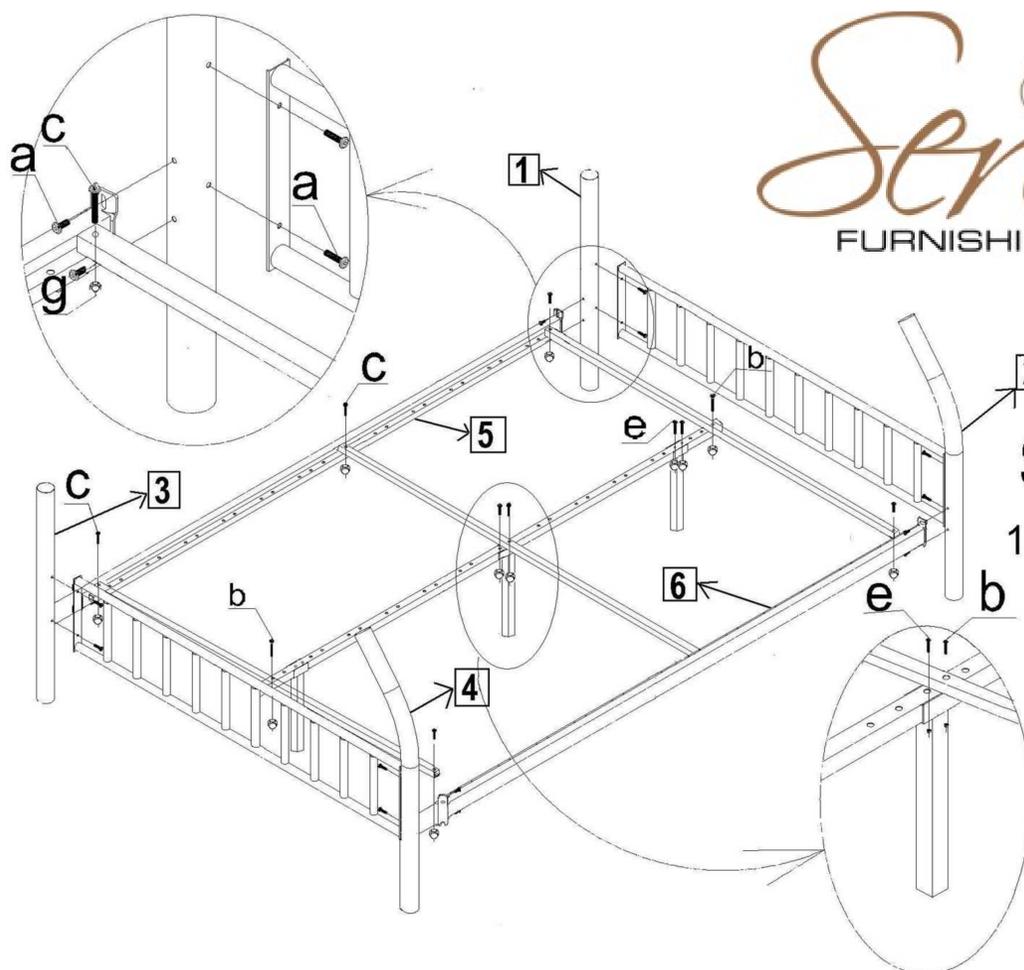


Step 1

- 1. (a) M6X20 JCBC screw 16 pcs
- (b) M6X50 JCBC screw 3 pcs
- (c) M6X45 JCBC screw 6 pcs
- (e) M6X30 JCBC screw 5 pcs
- (g) M6 Hexagon 14 pcs
- (j) #4 Allen key 1 pcs
- (k) Spanner for M6 Hexagon nut 1 pcs

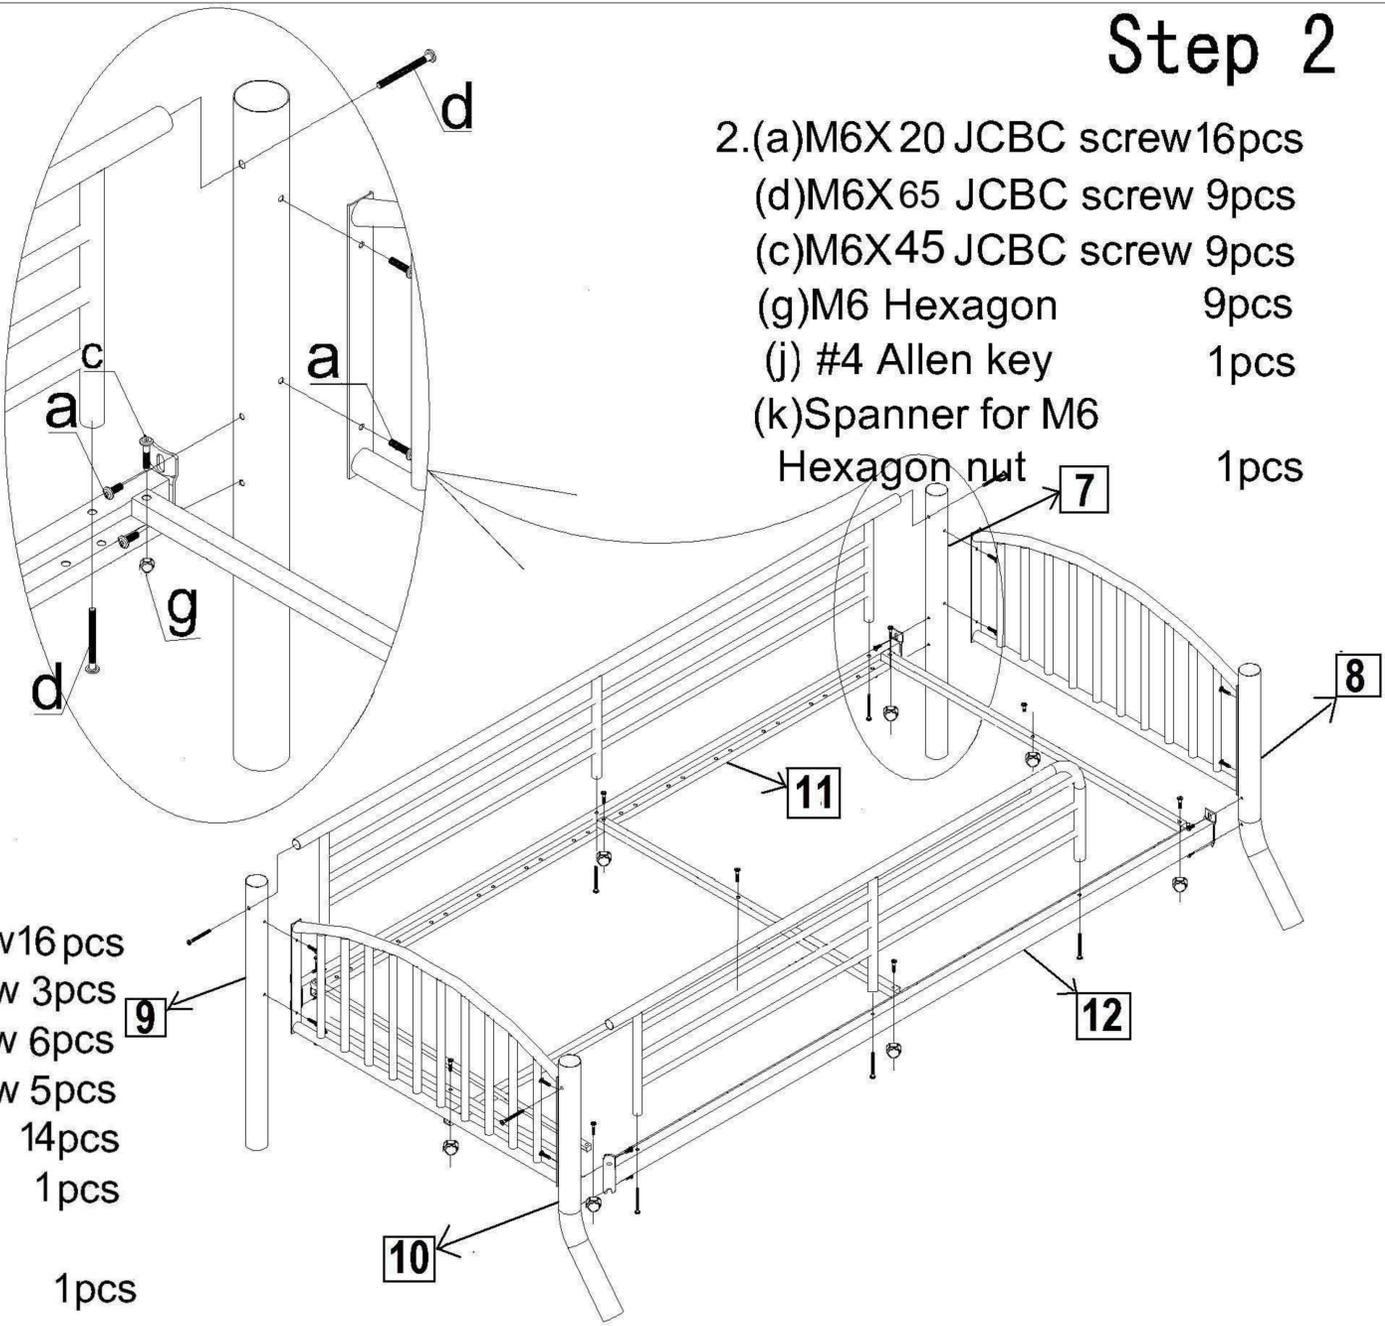

- 2. (a) M6X20 JCBC screw 16 pcs
- (d) M6X65 JCBC screw 9 pcs
- (c) M6X45 JCBC screw 9 pcs
- (g) M6 Hexagon 9 pcs
- (j) #4 Allen key 1 pcs
- (k) Spanner for M6 Hexagon nut 1 pcs

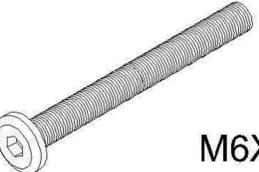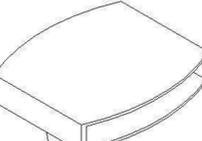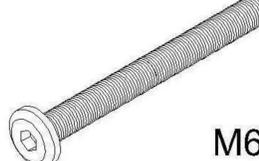 <p>a</p> <p>M6X20 JCBC screw 32 pcs</p>	 <p>b</p> <p>M6X50 JCBC screw 3 pcs</p>	 <p>c</p> <p>M6X45 JCBC screw 15 pcs</p>	 <p>d</p> <p>M6X65 JCBC screw 11 pcs</p>
 <p>e</p> <p>M6X30 JCBC screw 5 pcs</p>	 <p>f</p> <p>M6X10 JCBC screw 12 pcs</p>	 <p>g</p> <p>M6 Hexagon 37 pcs</p>	 <p>h</p> <p>Plastics 48 pcs</p>
 <p>i</p> <p>Plastics 12 pcs</p>	 <p>j</p> <p>#4 Allen key 1 pcs</p>	 <p>k</p> <p>Spanner for M6 Hexagon nut 1 pcs</p>	 <p>l</p> <p>M6X60 JCBC screw 2 pcs</p>


Model: OSLO THREE SLEEPER BED

Assembly steps 1 to 5

CARE INSTRUCTIONS


- Wipe clean using a soft damp cloth followed by a dry cloth.
- Do not use abrasives or cleaning products which may contain ammonia or solvents.
- Take care when handling or moving the furniture. Careless handling can damage furniture, try to lift rather than drag.

Step 4

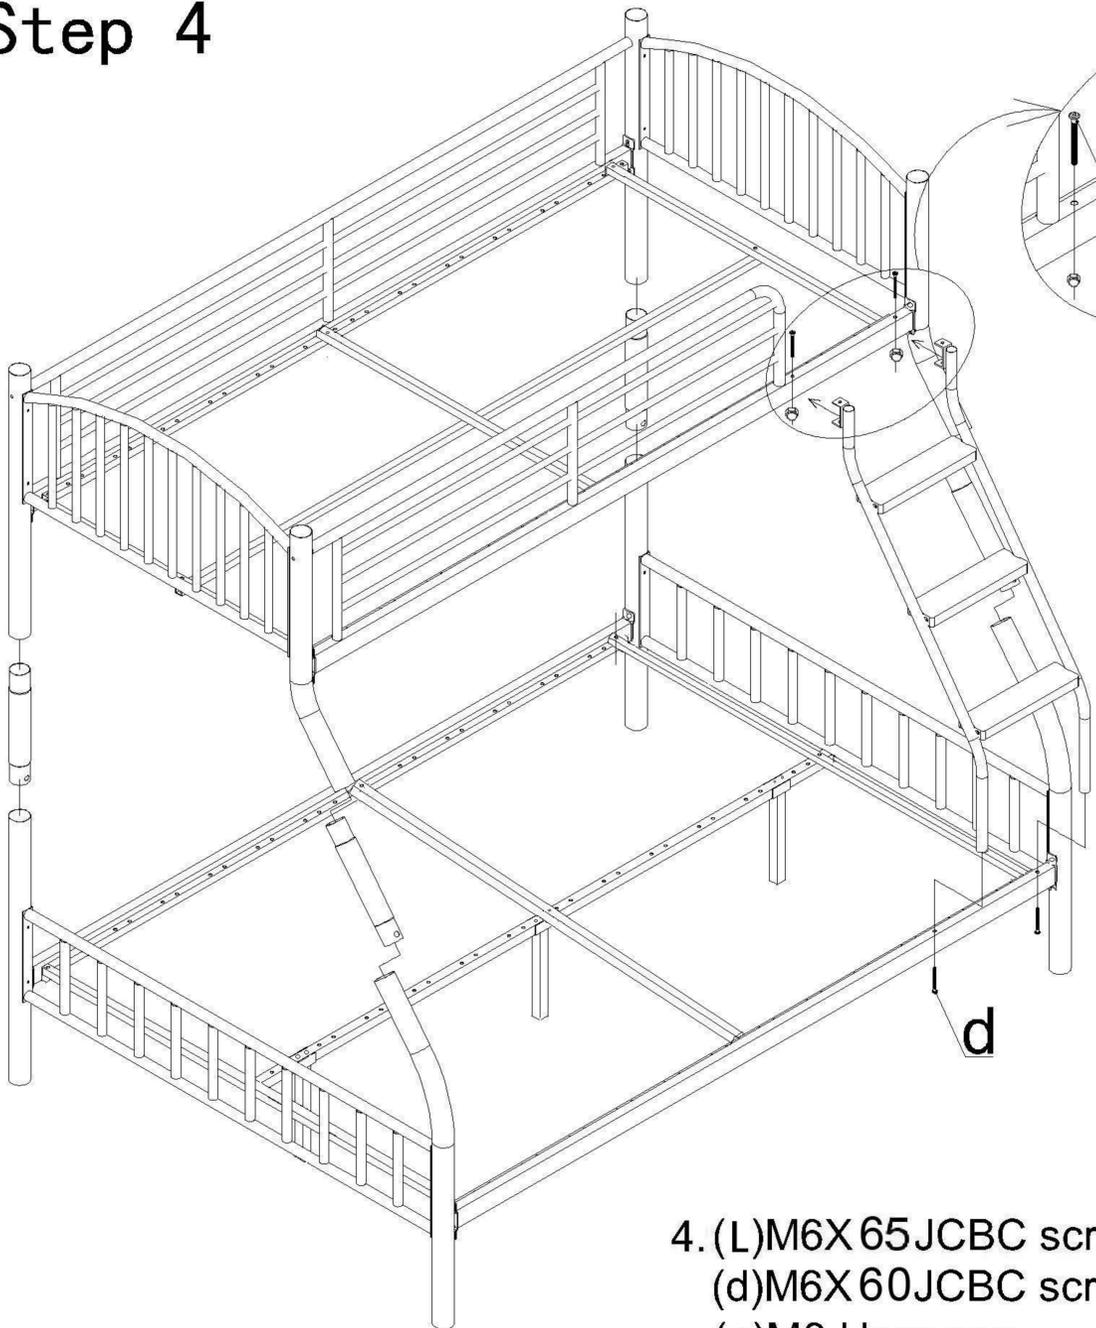


4. (L)M6X 65JCBC screw 2pcs
 (d)M6X 60JCBC screw 2pcs
 (g)M6 Hexagon 2pcs
 (j)#4 Allen key 1pcs
 (k)Spanner for M6 Hexagon nut 1pcs

Step 3

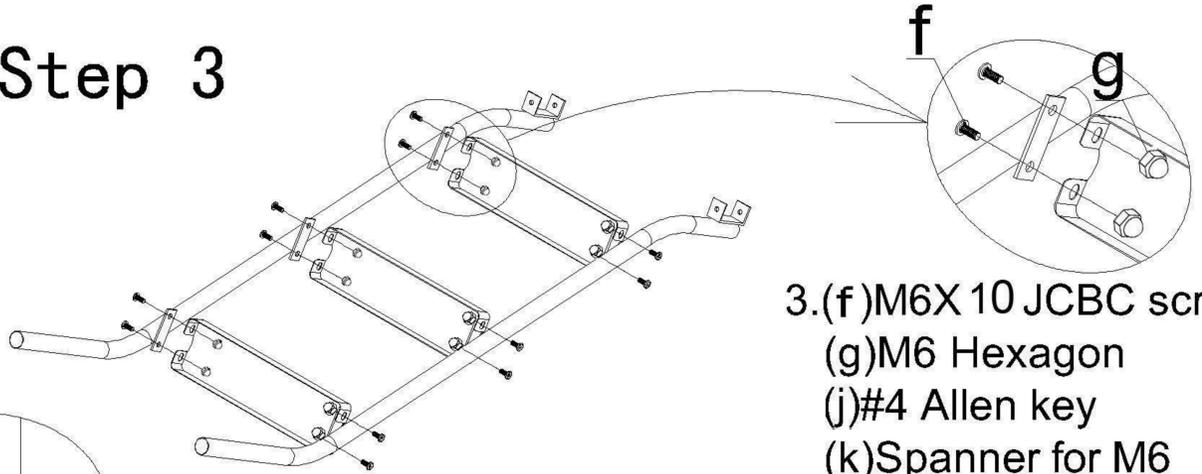

- 3.(f)M6X 10 JCBC screw 12pcs
 (g)M6 Hexagon 12pcs
 (j)#4 Allen key 1pcs
 (k)Spanner for M6 Hexagon nut 1pcs

Step 5

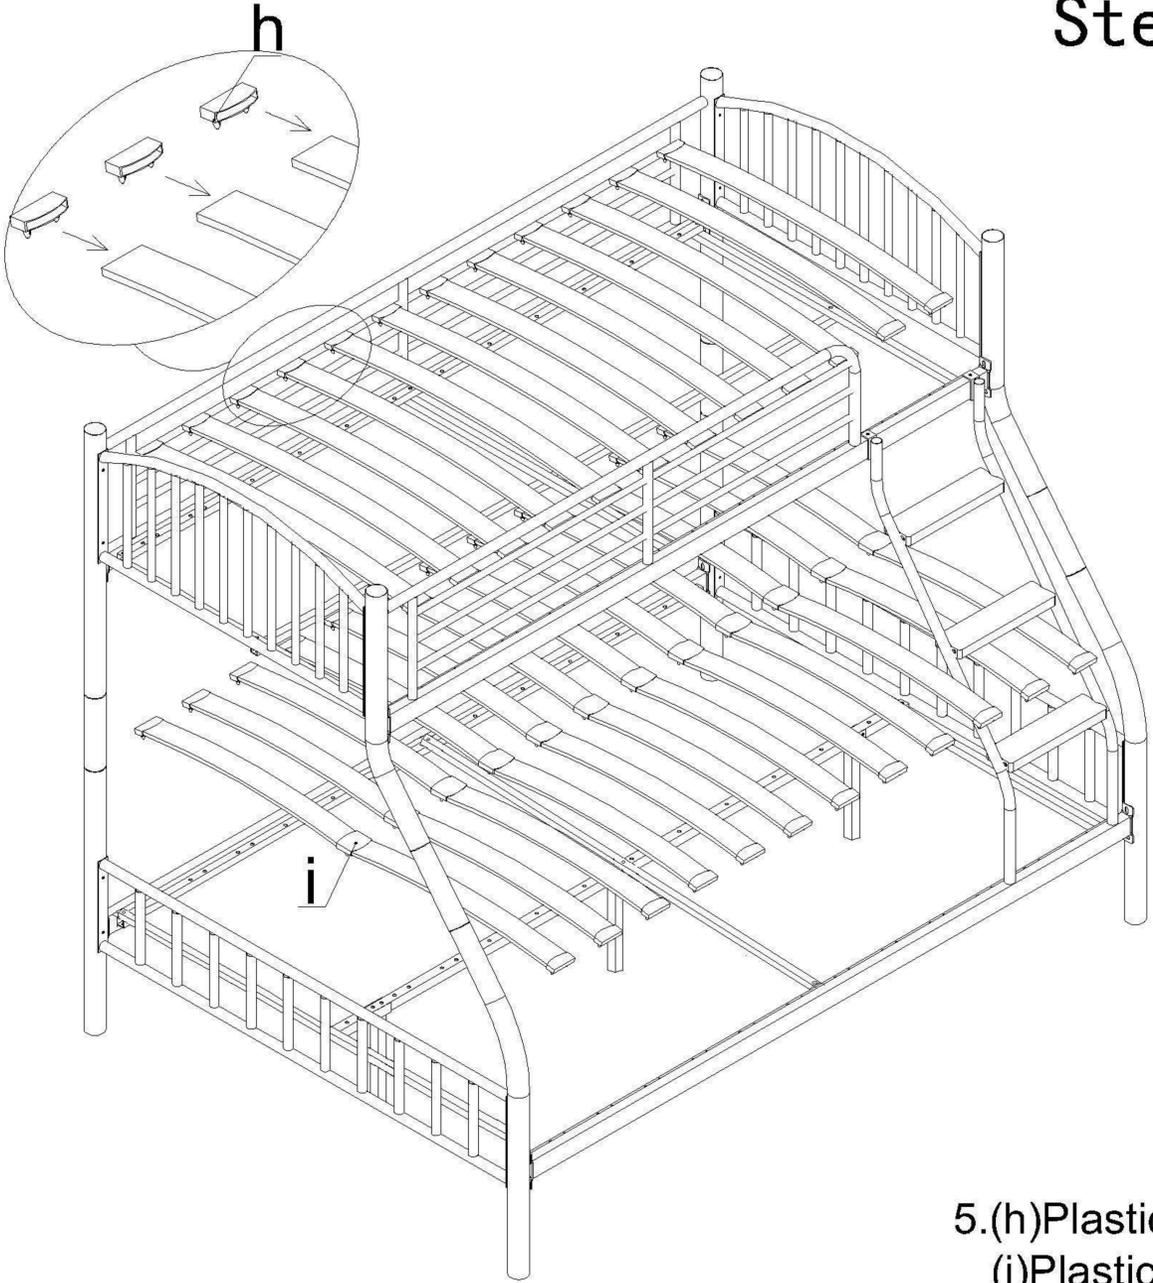

- 5.(h)Plastics 48pcs
 (i)Plastics 12pcs